

Upute za uporabu

Električna plancha GKDPL11P1M1

Sigurnosne upute

Molimo, odvojite vrijeme da pažljivo pročitate upute prije prve upotrebe i čuvajte ih za buduću upotrebu.

Nepravilno korištenje uređaja može ga oštetiti ili ozlijediti korisnika. Pobrinite se da uređaj koristite u skladu s njegovom namjenom. Ne preuzimamo odgovornost za štetu nastalu nepravilnim korištenjem ili lošom manipulacijom.

1. Provjerite odgovara li vaš napon mreže onome što je navedeno na uređaju.
2. Sigurnosne upute same po sebi ne uklanjaju nikakve opasnosti u potpunosti i uvijek se moraju koristiti odgovarajuće mjere za prevenciju nesreća.
3. Nikada ne ostavljajte uređaj bez nadzora dok se koristi.
4. Držite uređaj i njegov kabel izvan dosega djece mlađe od 8 godina.
5. Ovaj uređaj mogu koristiti djeca od 8 godina i starija te osobe sa smanjenim fizičkim, senzornim ili mentalnim sposobnostima, ili sa manjkom iskustva i znanja, ako im je pružen nadzor ili upute o sigurnom korištenju uređaja te ako razumiju povezane opasnosti.
6. Djeca se ne smiju igrati s uređajem.
7. Čišćenje i održavanje uređaja ne smiju obavljati djeca, osim ako nisu starija od 8 godina i pod nadzorom.
8. Ako je oštećen kabel, mora ga zamijeniti proizvođač, njegov serviser ili kvalificirana osoba kako bi se izbjegle opasnosti (*).
9. Kabel za napajanje treba redovito pregledavati
10. Radi znakova oštećenja i uređaj se ne smije koristiti ako je kabel oštećen.
11. Nemojte prelaziti kabel preko oštih predmeta i držite ga na udaljenosti od vrućih objekata i golih plamena. Uvijek povucite utikač kako biste ga odvojili od izvora napajanja.
12. Pobrinite se da kabel ili produžni kabel nisu u opasnosti od nenamjernog povlačenja niti od prevrtanja od strane drugih osoba tijekom uporabe.
13. Kada koristite produžni kabel, pobrinite se da je prilagođen za potrebnu potrošnju aparata. U protivnome, produžni kabel i/ili utikač se mogu pregrijati.
14. Koristite uređaj samo za kućanske svrhe i na način koji je naznačen u uputama.
15. Nikada nemojte uranjati uređaj u vodu.
16. U slučaju da uređaj padne u vodu, odmah ga isključite. Neka ga pregleda stručnjak prije ponovne uporabe, jer u suprotnome postoji opasnost od strujnog udara.
17. Nikada ne pokušavajte sami otvarati kućište.
18. Nemojte koristiti uređaj ako su vam ruke vlažne.
19. Nemojte dodirivati utikač ako su vam ruke vlažne ili mokre.

20. Nikada nemojte koristiti uređaj u blizini vrućih površina.
21. Nikada nemojte koristiti uređaj na otvorenom i uvijek ga postavite u suho okruženje.
22. Nikada nemojte pomicati uređaj povlačenjem za kabel. Pobrinite se da kabel ne može zapeti. Nemojte uvijati kabel oko uređaja i nemojte ga savijati.
23. Postavite uređaj na ravnu, suhu i stabilnu površinu.
24. Isključite uređaj kada se ne koristi.
25. Apsolutno je nužno održavati ovaj uređaj čistim u svakom trenutku jer dolazi u izravan kontakt s hranom.
26. Za upute o čišćenju površina koje dolaze u kontakt s hranom molimo pogledajte odjeljak čišćenje u priručniku.
27. Uređaj nije namijenjen za rad pomoću vanjskog timera ili odvojenog sustava za daljinsko upravljanje.
28. Čuvajte ovaj priručnik uz uređaj. Ako uređaj koristi treća osoba, priručnik mora biti dostavljen s njim.
29. Nikada ne prenosite uređaj dok je još vruć.
30. Namijenjeno samo za kućnu upotrebu.
31. Postoji mogućnost ozljede uslijed nepravilnog korištenja.
32. PAŽNJA: Temperatura dostupnih površina može biti visoka dok aparat radi.
33. Površina grijača ima postojanu preostalu toplinu nakon upotrebe.
34. Ovaj uređaj je namijenjen za upotrebu u kućanstvima i sličnim primjenama, kao što su: kuhinje za osoblje u trgovinama, uredima i drugim radnim okruženjima, od strane klijenata u hotelima, motelima i drugim vrstama stambenih objekata, okruženja tipa “ bed and breakfast ”
35. (*) Kvalificirani električar: odjel za postprodaju proizvođača ili uvoznika ili osoba koja je kvalificirana, odobrena i sposobna obaviti ovakve popravke kako bi se izbjegla sva opasnost. Za svaki kvar ili oštećenje, aparat trebate odnijeti kvalificiranom električaru.



OPREZ: Vruća površina

Tehničke specifikacije

Voltaža: 230V~ 50Hz

Snaga: 2800W

Upotreba uređaja

Očistite ploču prije upotrebe. Priključite uređaj i zagrijte ga praznog kako biste uklonili ostatke. Prije svake upotrebe prethodno zagrijte uređaj.

Pobrinite se da je spremnik za masnoću (sa strane) na mjestu.

Ako želite, možete namazati pleh s malo biljnog ulja prije nego stavite hranu na njega. Budite oprezni prilikom korištenja ulja ! Ako se previše zagrije može se zapaliti.

Preporučujemo da stavite meso i povrće u područje kuhanja. Koristite drveni pribor prilikom okretanja hrane. Postavite tipke za kontrolu temperature prema svom izboru.

Tijekom kuhanja uređaj prestaje grijati kada ploča postigne maksimalnu temperaturu i indikatorna lampica se gasi. Uređaj će ponovno početi grijati čim temperatura ploče bude preniska. **Upozorenje:** indikatorna lampica se neće ponovno upaliti osim ako ručno ne povećate temperaturu. Nakon kuhanja, pobrinite se da je tipka za kontrolu temperature u položaju "OFF" i isključite uređaj iz struje.

Produced for: PRO-TRADE d.o.o.

Hebrangova 32, 10 000 Zagreb, Croatia

VAT: HR20429317317

Made in: P.R.C. Ningbo Huige Outdoor Products Co., Ltd

ELECTRIC PLANCHA

POT20250208

230V~50Hz-2800W



Grill King®

Čišćenje i održavanje

Oprez ! Nemojte koristiti deterdžente, žičane četke ili druge abrazivne predmete za čišćenje ploče. Budite oprezni pri korištenju kuhinjskog ulja, jer se može zapaliti ako se pregrije.

Isključite uređaj iz struje prije nego očistite ploču i pustite da se ohladi.

Nemojte uranjati uređaj u vodu. Očistite ploču dok je još topla, koristeći toplu sapunicu. Nježno obrišite ploču spužvom ili krpom. Koristite vlažnu krpu za čišćenje postolja.





Ispravno odlaganje otpada (električna i elektronička oprema).


(Primjenivo u Europskoj uniji i ostatku Europe koji su usvojili sustave odvojenog prikupljanja otpada). Europska direktiva 2012/19/EU o otpadu električne i elektroničke opreme (WEEE), zahtijeva da se stari kućanski električni uređaji ne odlažu zajedno sa uobičajenim kućanskim otpadom. Stari uređaji moraju se prikupljati odvojeno kako bi se optimiziralo njihovo recikliranje i ponovna uporaba materijala te smanjio utjecaj na ljudsko zdravlje i okoliš. Simbol prekrižene kante za otpad nalazi se ne svim proizvodima kako bi podsjetio na obvezu odvojenog prikupljanja. Potrošači bi se trebali obratiti lokalnim vlastima ili trgovcima za informacije o pravilnom odlaganju svojih proizvoda.

- Neobvezujuća ilustracija
- Informacije o proizvodu podložne su promjenama bez prethodne najave


DPL11P1M1

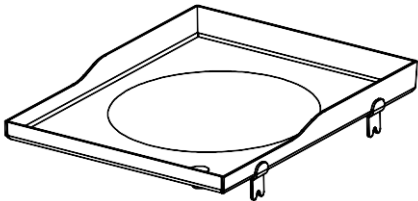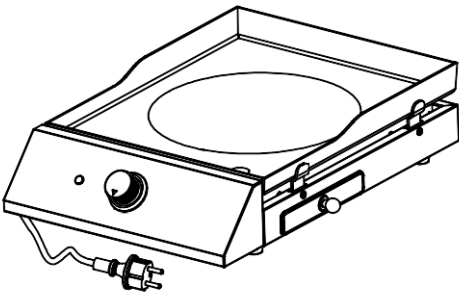


①

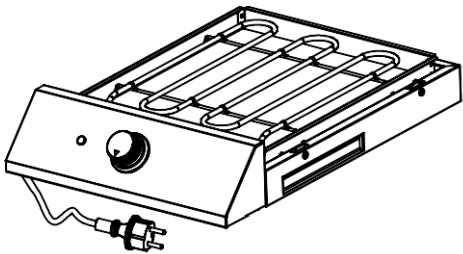




②

 


③

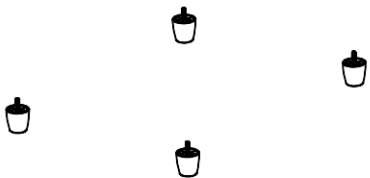 


④

   

1

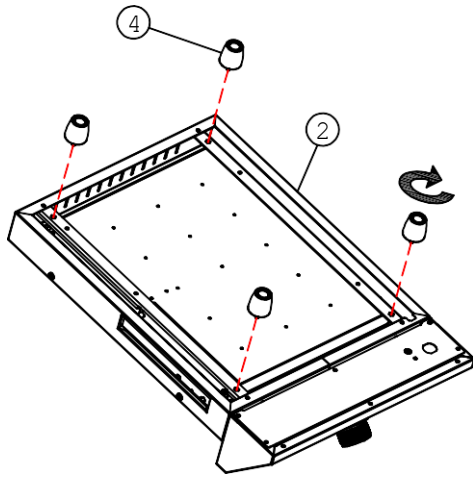 

2

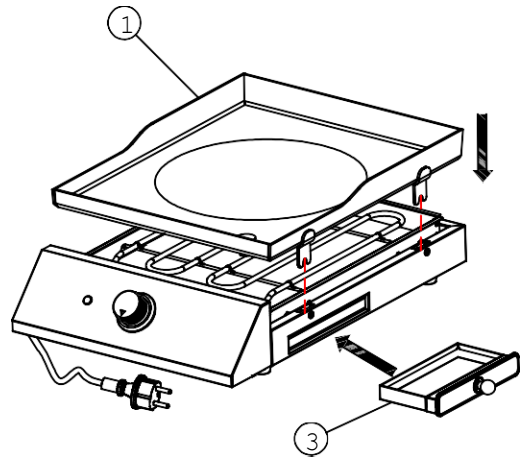 

3

4

User Manual

Electric Plancha GKDPL11P1M1

Safety Instructions

Please, take time to read well the instruction sheet before the first use and keep them for a future use.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed. We refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. Check that your main voltage corresponds to that stated on the appliance.
2. The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used.
3. Never leave the appliance unsupervised when in use.
4. Keep the appliance and its cord out of reach of children less than 8 years.
5. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
6. Children shall not play with the appliance
7. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
8. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard ^(*).
9. The supply cord should be regularly examined for signs of damage and the appliance is not to be used if the cord is damaged.
10. Do not pass the cord over objects with sharp edges and keep it at a distance from, hot objects and bare flames. Always pull on the plug to disconnect it from the feed source.
11. Make sure that the cord or the extension cable is not at risk of being pulled inadvertently nor of being topped over by anyone at the time of use.
12. When you use an extension cable. Make sure that it is adapted to the appliance essential consumption. Contrary to this, the extension cable and/ or the plug risks overheating.
13. Only use the appliance for domestic purposes and in the way indicated in the instructions.
14. Never immerse your appliance base in water.
15. In case the appliance accidentally falls into water disconnect it immediately. Have it checked by an expert before re-using, if you do not do this you run the risk of electrocution.
16. Never try to open the casing yourself.
17. Do not use the appliance if your hands are damp.
18. Do not touch the plug if your hands are damp or wet.
19. Never use the appliance near hot surfaces.
20. Never use the appliance outside and always place it in a dry environment.
21. Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way. Do not wind the cord around the appliance and do not bend it.
22. Place the appliance on a flat, dry and stable surface.

23. Unplug the appliance when not in use.
24. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
25. Regarding the instructions for cleaning surfaces in contact with food, thanks to refer to the below paragraph “cleaning” in the manual.
26. The appliance is not intended to be operated by means of external timer or separate remote control system.
27. Keep this manual with the appliance. If the appliance is to be used by a third party, this instruction manual must be supplied with it.
28. Never carry the appliance while still hot
29. Household indoor use only.
30. There is potential injury from misuse.
31. CAUTION: The temperature of accessible surfaces may be high when the appliance is operating.
32. The surface of the heating element has residual heat after use.
33. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments

^(*) Competent qualified electrician: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician



CAUTION: Hot surface

Technical Specifications

Voltage: 230V~ 50Hz

Power: 2800W

Use of the device

Clean the hob before use. Plug in the appliance and heat it up without any load to remove any residues.

Preheat the appliance before each use.

Make sure that the grease trap (on the side) is in place.

If you wish, you can brush the baking tray with a little vegetable oil before placing the food on it.

Be very careful when using oil! If it is heated too much, it can catch fire.

We suggest you to place your meat and your vegetables cooking area. Use a wooden spatula to turn your food.

Set the temperature control knobs according to your choice.

Produced for: PRO-TRADE d.o.o. Hebrangova 32, 10 000 Zagreb, Croatia VAT: HR20429317317 Made in: P.R.C. Ningbo Huige Outdoor Products Co., Ltd
ELECTRIC PLANCHA
POT20250208
230V~50Hz-2800W
  Grill King®

During cooking, the appliance stops heating when the hob has reached the maximum temperature and the indicator light goes out. The appliance will automatically restart heating as soon as the hob temperature is too low. **Warning:** the indicator light will not come back on unless the temperature is manually increased. After cooking, make sure the temperature control knob is in the "OFF" position and unplug the griddle.

Cleaning and maintenance

Caution! Do not use detergents, wire brushes or other abrasive objects to clean the plate.

Be very careful when using cooking oil, if it is overheated it can catch fire.

Unplug the appliance before cleaning the plate and allow it to cool.

Do not immerse the appliance in water. Clean the plate while it is still warm, using warm soapy water.

Gently wipe the plate with a sponge or cloth. Use a damp cloth to clean the stand.





Correct disposal of the unit (Electrical and Electronic Equipment).


(Applicable in the European Union and the rest of Europe that have adopted separate collection systems countries). The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal household waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The symbol of the crossed out dustbin is marked on all products to remind the obligations of separate collection. Consumers should contact their local authority or retailer for information concerning the correct disposal of their product.

- Non contractual illustration
- Product information is subject to change without prior notice.


~~DPL11P1M1~~

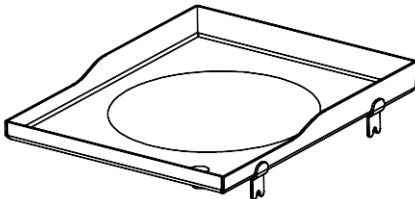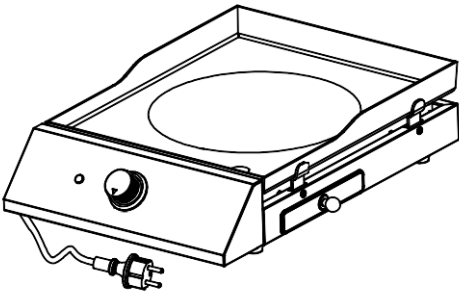


①

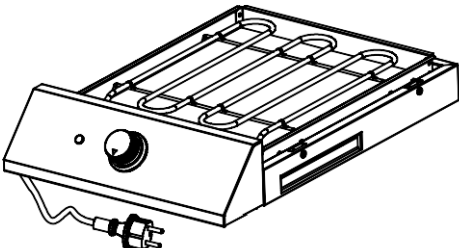



②

 


③

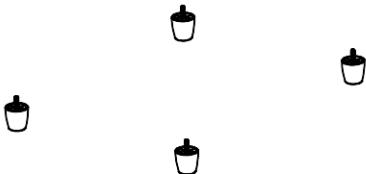 

④

  
$$\textcircled{1} * 1$$

 
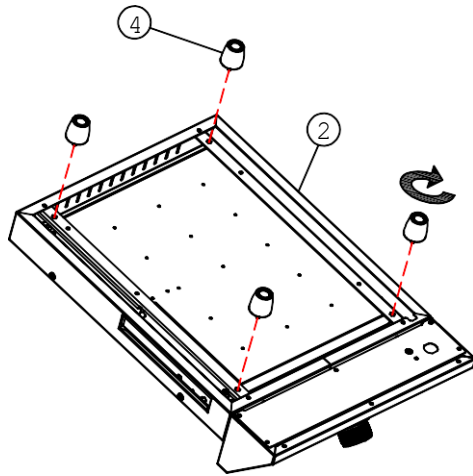 
② *1




③ *1


$$\textcircled{4} * 4$$
[illegible]

1



 2

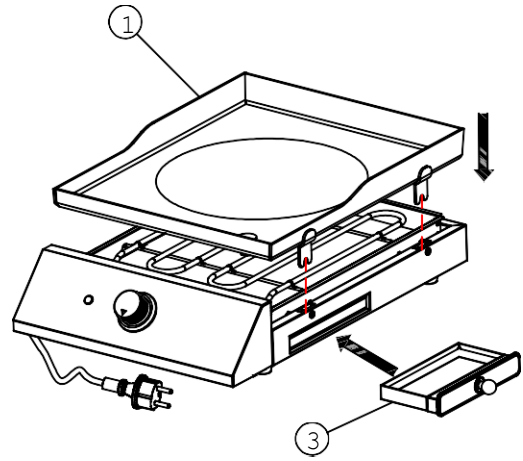

3

4